
























# JANOME












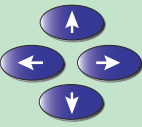














Memory Craft 11000
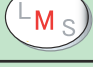
## ON-SCREEN KEY ICONS

COMMON		
	Exit	Close the current window without registering the settings or changes.
	Default	Return the settings to default (the factory settings).
	Delete	Delete the selected object.
	Cursor	Move the cursor to the left or right.
	Previous Page	Go to the previous page.
	Next Page	Go to the next page.
	Play	Play the on-screen help movie.
	Stop	Stop playing the on-screen help movie.
	Fast Forward	Search the on-screen help movie in the forward direction.
	Rewind	Search the on-line help movie in the reverse direction.
	Full Screen	Enlarge the movie window to full screen.

ORDINARY SEWING		
	Drop Feed	Drop or raise the feed dog.
	Twin Needle	Limit the stitch width to the allowable value for the twin needle.
	Needle Position	Set the needle to be in the up or down position when the machine stops.
	Program	Allow programming a combination of patterns.
	Mirror Image	Flip the stitch pattern.
	Program Check	Show the entire programmed pattern combination.
	Start Over	Re-sew the pattern combination from the beginning.
	Letter Size	Change letter size.
	Letter Case	Switch between upper and lower case letters.

FILE MANAGEMENT		
	Save File	Save the pattern combination or embroidery design as a file.
	New Folder	Create a new folder.
	Rename	Allow renaming a file or folder.

EMBROIDERY		
	Jog	Move the hoop for precise positioning.
	Layout	Move the selected object in the edit window.
	Duplicate	Duplicate the selected object.
	Stitch Preview	Show a stitched image of the embroidery.
	Carriage Return	Return the carriage and exit embroidery mode.
	Trace Outline	Move the hoop to trace the embroidery design without stitching.
	Jog/ST	Switch between using as the Jog keys and Stitch Forward/Backward keys.
	Tension Adjust	Adjust the auto tension level.
	Hoop Selection	Select the size of hoop.
	Rotate	Rotate the selected object.
	Flip	Flip the selected object horizontally or vertically.
	Zoom-in	Zoom-in the editing window.
	Resize	Resize the selected object.
	Color/Part	Switch between the entire image and a color-by-color view of the selected design.
	Custom Color	Customize the display color of the image background or the embroidery design image.
	Window/Design Color	Select the image background or embroidery design for color customizing.
	Lettering Orientation	Select horizontal or vertical orientation for the lettering.
	Letter Size	Select the letter size.
	Color Change	Change color of individual letter.
	Justify	Select left, center or right justification for the lettering.
	Arc	Make the lettering in arc.
	Letter Case	Switch between upper and lower case letters.
	Upward Arrow	Make the arc deeper.
	Downward Arrow	Make the arc shallower.
	Inward Arrow	Make the arc smaller.
	Outward Arrow	Make the arc larger.